

Ideal for developing cognitive skills!

Great for both children and adults, this innovative puzzle has removable blocks which allow the user to progressively increase the skill required to complete the task. Start with one shape and any four blank blocks and build up to five distinct shapes. When the task is completed, music plays. If a reward toy or device is connected to the blocks, it will automatically turn on but music will not play. You can easily shift or rotate the blocks to teach spatial relations, form constancy and mental imagery. Size: 15½"L x 4¾"W x 1¼"H. Requires 2 AA Batteries. Weight: 1¼ lbs.

Operation:

1. The battery holder is located under the unit. Observing polarity, install 2 AA batteries into the battery holder. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. To operate this unit as a switch connect a cord to an external toy or device via the 1/8-inch jack on the back of the unit. The Interchangeable Music Puzzle/Switch comes with a 1/8- to 1/8-inch connector cord for activating toys or devices with 1/8-inch jacks.

Note: *This unit does not play music when it is connected to an external toy or device. Also, if this unit is **not** connected to an external toy or device, the universal adapter must be removed from the jack or the unit will not operate properly.*

Troubleshooting:

Problem: The Interchangeable Music Puzzle/Switch *will not* operate as a toy, but *will* operate as a switch. In other words, when the red circle is set in place properly, the unit *will not* play music, but it *will* activate a connected external toy or device.

Action: Remove the universal from the jack. If the unit still does not work properly, replace the battery in the Interchangeable Music Puzzle/Switch.

Problem: Interchangeable Music Puzzle/Switch *will* operate as a toy, but *will not* operate as a switch. In other words, when the red circle is set in place properly the unit *will* play music, but it *will not* activate a connected external toy or device.

Action: Replace the batteries in the external toy.

Care of Unit:

The Interchangeable Music Puzzle/Switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Interchangeable Music Puzzle/Switch #921

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com