

---

---

## Entangled Dome #9229

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

## Soothing!

Press anywhere on the base, rim or dome to enjoy lights, music and vibration. Great for increasing visual attention, tactile awareness and auditory development. Lights, vibration and music can be turned on or off by hidden switches. *Size: 8½"D x 5"H. Requires 4 AA Batteries. Weight: 1½ lbs.*

*PLEASE NOTE: Not to be used with seizure prone individuals.*

1. The Entangled Dome requires 4 AA batteries (not included). Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal the battery compartments. Remove the small screw from each cover using a Phillips head screwdriver, and then lift the battery compartment covers off. Install batteries into the holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Press anywhere on the base, rim or dome to enjoy lights, music and vibration. Great for increasing visual attention, tactile awareness and auditory development. Lights, vibration and music can be turned on or off by hidden rocker switches under the base. Release pressure from dome or rim and the lights, vibration and music will stop.
3. When you are finished using the Entangled Dome turn the ON/OFF toggle switch to OFF to prevent any false activations and battery drain.

## Troubleshooting:

**Problem:** Entangled Dome does not play music, vibrate or light up.

**Action: #1** Make sure the ON/OFF toggle switch is set to ON. Also make sure you have the white rocker switches set to on for your desired stimuli.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Entangled Dome does not work at all.

**Action: #1** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

## Care of the Unit:

If you will not be using Entangled Dome for an extended amount of time, we recommend removing the batteries.

Entangled Dome can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.