
Mother Goose #9309

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Five nursery rhymes!

Activate your capability switch and Mother Goose reads five beloved nursery rhymes while her head bobs and turns from side to side and her beak opens and closes as if she's speaking. Children will be enchanted by her movements, her warm and friendly voice, and the music that accompanies the rhymes. The rhymes and music play for 1½ minutes after you activate your switch. If you hit the switch again during play, the rhymes and music will start from the beginning. Also works without a switch. Size: 14"H x 7"W. Requires 3 AA Batteries. Weight: 1½ lbs.

Operation:

1. Mother Goose requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Mother Goose. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Set the On/Off switch to On. Replace the battery compartment cover and secure it with the screw.
4. Connect Mother Goose to any external capability switch (not included) via the jack located at the end of his cord. Mother Goose is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze Mother Goose's arm with the musical note symbol and she will reads five beloved nursery rhymes while her head bobs and turns from side

to side and her beak opens and closes as if she's speaking. Children will be enchanted by her movements, her warm and friendly voice, and the music that accompanies the rhymes. The rhymes and music play for 1½ minutes after you activate your switch.

6. Each switch activation or arm squeeze will start or stop Mother Goose. If you hit the switch or squeeze her arm again during play, the rhymes and music will start from the beginning.

Troubleshooting:

Problem: Mother Goose does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Mother Goose for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Mother Goose is surface washable only.