

---

---

## **Army Bear #9314**

---

---

## **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Go Army!***

Activate your capability switch and this bear's head sways and mouth moves while he sings "The Army Goes Rolling Along", the official song of the US Army. Works both with and without a switch. Size: 19"H x 8"W. Requires 3 AA Batteries. Weight: 1¼ lbs.

#### **Operation:**

1. Army Bear requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is on the bottom of the Bear inside the zipper enclosed compartment. Open the flap then, using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to ON.
4. Connect Army Bear to any external capability switch (not included) via the jack located at the end of his cord. Army Bear is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze the Bear's paw and bear's and his head sways and mouth moves while he sings "The Army Goes Rolling Along", the official song of the US Army. Pressing your switch or his paw while he is singing will stop him. Pressing your switch or squeezing his paw again will start him from the beginning of the song.

6. When finished using Army Bear turn his ON/OFF switch to off to prevent false activations and to prevent battery drain.

#### **Troubleshooting:**

**Problem:** Army Bear does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using Army Bear for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Army Bear is surface washable only.