
Kiss the Cook Pig #9315

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Sings & dances!

Activate your capability switch and Hamlet the pig sings “Hey Good Lookin’ (Whatcha Got Cooking)” and dances from side to side. Dressed in a “Kiss the Cook” apron and chef’s hat. Works both with and without a switch. Fun way to teach cause and effect. Size: 12"H x 9"W. Requires 3 AA Batteries. Weight: 1 lb.

Operation:

1. Kiss the Cook Pig requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located inside the Velcro enclosed compartment on his back. Open the flap then, using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to ON.
4. Connect Kiss the Cook Pig to any external capability switch (not included) via the jack located at the end of his cord. Kiss the Cook Pig is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze the Pig’s hoof and he will sing the song “Hay Good Lookin What you got Cookin’” as he moves side to side. Pressing your switch or his hoof while he is singing will stop him. Pressing your switch or squeezing his hoof again will start him from the beginning of the song.

6. When finished using Kiss the Cook Pig turn his ON/OFF switch to off to prevent false activations and to prevent battery drain.

Troubleshooting:

Problem: Kiss the Cook Pig does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Kiss the Cook Pig for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Kiss the Cook Pig is surface washable only.