

---

---

## **Tic Tac Toe #949**

---

---

## **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### *Three in a row!*

Our Tic Tac Toe game is a great version of the classic game for all ages. Activate your colored switch to light up your chosen colored LED square and you are on your way to making a Tic Tac Toe in a horizontal, vertical, or diagonal pattern. Great for working on turn taking, directionality and placement skills. Black button is to clear the last move made. Music plays and lights flash when you have the winning combination. Item has two switch inputs so players can use their own capability switches if needed. Size: 11"L x 13½"W x 9½"H. Requires 4 AA Batteries. Weight: 2¼ lbs.

#### **Operation:**

1. Tic Tac Toe requires 4 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the back of Tic Tac Toe. Turn the unit to face the battery compartments. Locate and remove the small Phillips Head screws from the covers. Next slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Set the ON/OFF switch located next to the battery compartment.
3. Our Tic Tac Toe Game is a great version of the classic fun game for all ages. Activate your X or O colored switch to light up your chosen colored led square and you are on your way to making a Tic Tax Toe in a vertical, horizontal or diagonal pattern. When you get three in a row you win the game music plays and the winning 3 led squares blink.
4. The games base has 2 jacks for external switch use. When you choose a square the led will lock in place after 3 seconds. If you make a mistake you can hit the black button to take off the led, but once you choose another square you can't take the last led off.

5. When using external switches, make sure you have a flush connection with no gaps between the jacks and the switch plugs.
6. When finished playing Tic Tac Toe turn the ON/OFF switch to OFF to help prevent battery drain. **Please Note:** For prolong periods of storage we recommend removing the batteries.

#### **Troubleshooting:**

**Problem:** Tic Tac Toe does not work.

**Action #1:** Check all batteries for proper (+) & (-) battery polarity.

**Action #2:** Replace all batteries with fresh new batteries. Never mix different brands or old and new batteries.

**Problem:** One of Tic Tac Toe's built in switches does not works or is inconsistent.

**Action:** Check that no debris or small objects are blocking or obstruction any of the buttons on the base.

**Problem:** Tic Tac Toe does no work with external switches.

**Action#1:** Make sure that you have a tight connection between the external switches and the jacks. There should be no gaps.

**Action#2:** Try your external capability switches with another toy/device to rule out the switches as the source of the problem.

#### **Care of Unit:**

Tic Tac Toe wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.