

Troubleshooting:

Problem: Chimalong does not function correctly.

Action #1: Make sure you have the ON/OFF switch set to ON.

Action #2: Make sure there is no dirt or obstructions between the switch plates and the housing of the unit.

Action #3: Replace the batteries paying close attention to proper battery polarity.

Action #4: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

Care of Unit:

If you will not be using Chimalong for an extended amount of time, we recommend removing the batteries.

The Chimalong can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit in water, as it will damage the electrical components.

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Chimalong #2208

USER'S GUIDE


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Unique music maker!

We've adapted this award winning xylophone with eight color coded switches to match the notes of each musical tube. With our twelve color-coded song cards, it's easy to play songs by pressing the matching color on the switch plates. Song cards include familiar songs such as London Bridge and Oh Susannah. You can also play your own tunes or six additional pre-recorded songs including Home on the Range and This Land is Your Land. Great for encouraging music appreciation, sing-a-longs, color matching, and cause and effect. Plays in the key of C or F. Two mallets and twelve color-coded music sheets included.

Size: 20"L x 21"W x 8¾"H. Requires 4 AA and 4 C Batteries. Weight: 5 lbs.

Overview:

The Chimalong musical instrument is a multi-award winner which was chosen by Parents Choice Classic Award and the Oppenheim Award.

The Chimalong has been recommended for its educational value by John Sebastian, Marilyn Horn, Andre Watts, Peter Shickele and the late Jim Henson. Tuned to C major, the Chimalong can be played by number, color or notes. A xylophone-style instrument made with world famous Woodstock Chimes tubes, the Chimalong comes with an extra #7 tube, which changes the B (for key of C) to be flat (for key of F), giving greater musical flexibility. It also comes with two mallets and 12 color coded music sheets.

Operation:

1. Chimalong requires 4 AA & 4 C Batteries to operate. Turn the unit over; you will see a black battery compartments. Carefully remove the small screws from the battery compartments and slide the battery compartment covers off. Observing polarity, install 4 AA & 4 C size batteries (Not included) into the holders. Replace covers and screws. Alkaline batteries must be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit ON by setting the ON/OFF switch to ON.

Changing the #7 Tube:

Carefully slide the tube out from one side while supporting the foam holder as shown.



3. If the user wants to hear some tunes first all he has to do is hold switches 1 and 8 at the same time and he will hear 1 of 6 pre-programed songs. Not in any particle order they are!

1. London Bridges
2. Over The River And Through The Woods
3. The Mulberry Bush
4. Camptown Races
5. Oh Susannah
6. Ring Around The Rosie.

Besides the above music there is also another 6 music sheets included.

7. This Land is Your Land*
8. Eency Weency Spider*
9. Home on The Range*
10. Oh My Darling, Clementine*
11. He's Got The Whole World in His Hands
12. This Old Man

Note * means tube #7 must be changed to make it an F Scale. There are many more songs that the customer can down load from <http://www.chimes.com/t-songs-ch1jr.aspx>.

4. Each song card has numbered and colored dots which correspond with the colored music buttons on the Chimalong. Place one of the cards into the card holder slot and play the song. Please reference the included original manufactures instructions for more information.