
Baa Baa Baby Lamb #4379

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Press and hold your capability switch and this adorable Baby Lamb goes Baa Baa walks forward and wags his tail. Small, cute and soft. Size: 9"L x 5½"W x 8"H. Requires 3 AAA Batteries. Weight: 1 lb.

Operation:

1. Baa Baa Baby Lamb requires 3 AAA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Baa Baa Baby Lamb over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AAA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Due to switch adaption Baa Baa Baby Lamb will only through the use of an external switch. The built in musical note button on his side will not work.
4. Connect Baa Baa Baby Lamb to any external capability switch via the cord input jack. Make sure all connections are pushed in all the way, there should be no gaps. Press and hold your capability switch and this adorable Baby Lamb goes Baa Baa walks forward and wags his tail.
5. Turn OFF Baa Baa Baby Lamb when finished using to prevent false activation and battery drain.

Troubleshooting:

Problem: Baa Baa Baby Lamb does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action #3: Make sure that you have plugged your switch in all the way. There should be no gaps.

Action #4: Try your external capability switches with another device to rule out the switches as the source of the problem.

Care of the Unit:

If you will not be using Baa Baa Baby Lamb for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Baa Baa Baby Lamb is surface washable only.