

---

---

## Thumbs Up Popper #7515

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

You'll give this toy two thumbs up! Just press the smiley face button to start the bouncing balls and twinkling multi-color lights.

Increases visual awareness and teaches cause and effect. Also works with your capability switch. Size: 8"L x 12"W x 9"H

Weight: 2 lbs. Battery: 6 AA

### **Operation:**

1. Thumbs Up Popper requires six AA size batteries Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screws, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off switch to On.
3. Activate the Thumbs Up Popper by depressing the smiley face button switch, or connect the unit to any external capability switch via the jack, located on the side of the unit. Thumbs Up Popper is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, like our #1170, not stereo.
4. If you are using an external capability switch, make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Thumbs Up Popper are plugged in all the way. There should be no gaps.

5. Begin play by either activating the smiley face button switch or by activating your own external capability switch to start the bouncing balls and twinkling multi-color lights. Increases visual awareness and teaches cause and effect. Once you release the switch all will stop.

### **Troubleshooting:**

**Problem:** The balls do not move and no lights.

**Action #1:** Check all three sets of batteries for proper installation and freshness.

**Action #2:** Make sure nothing is blocking or restricting the depressing of the smiley face button switch.

**Action #3:** Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

### **Care of Unit:**

Thumbs Up Popper can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.