

---

---

## Spinz-a-Round #7799

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Dazzling glitter, mirror, lights and upbeat music make this an exceptional multisensory experience. Just activate your capability switch and the colorful metallic spinner starts the glitter flying while lights shine and music plays. Great for improving visual attention. Size: 10"L x 10"W x 10½"H Weight: 3 lbs. Battery: 4 C

1. The Spinz-a-Round requires 4 C batteries (not included). Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal 2 black battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install C size batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level.
3. Plug any capability switch into the switch jack located on the side of the Spinz-a-Round. Make sure your switch is plugged in all the way, there should be no gaps. Activate your switch and the colorful metallic spinner starts the glitter flying while lights shine and music plays. Great for improving visual attention. Release pressure from your switch and all will stop.

### **Troubleshooting:**

**Problem:** Spinz-a-Round does not spin or light up.

**Action #1:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Spinz-a-Round does not play music.

**Action:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Spinz-a-Round does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Spinz-a-Round does not activate my switch.

**Action # 1:** Make sure all connections are tight.

**Action # 2:** Check your switch with another device you know is working.

**Action # 3:** If an adapter is being used, it must be Mono, stereo adapters will not work.

### **Care of the Unit:**

Spinz-a-Round can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.