
Melody Bells #2406

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697

www.enablingdevices.com

Our compact musical toy spins a wonderful cascade of music when you activate your switch (not included). Eight colorful metal bells produce a clear tone when the striker ball hits them while LED lights softly flash. Great for teaching cause and effect, improving hand eye coordination, and increasing listening skills. Perfect size for a wheelchair tray. Size: 8" H x 6 "D. Requires 5 AA Batteries. Weight: 2 lb.

Operation:

1. Melody Bells requires 5 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable or heavy duty batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn the unit over and remove the battery cover screw. Next lift the cover off to reveal the battery compartment. Install the batteries following proper + & - battery polarity. Replace cover and screw.
3. Melody Bells is activated by an external switch (Not included). Connect any external capability switch via the jack, located on the back of the unit. Melody Bells is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter purchased elsewhere, it must be a mono adapter, not stereo. Make sure that the connections are plugged in all the way, especially when using adapters. There should be no gaps between the switch and the adapter (if applicable) and/or the adapter and the jack.
4. Activate your external capability switch and enjoy the music and LED lights! If you are using a momentary switch, Melody Bells will only remain on while your switch continues to be activated.

5. A switch Latch/Time module (e.g. #605) or switch with a built in Latch/Timer can also be used with Melody Bells.

Troubleshooting:

Problem: The bell striker does not turn and no LED lights.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead. Rotate (spin) the batteries within the battery compartment to ensure a good connection.

Action #1: Make sure nothing is blocking or restricting the bell striker from rotating.

Action # 2: Make sure all connections are plugged in all the way. There should be no gaps. If adapters are being used, they must be Mono only stereo adapters will not work.

Action # 3: Check your switch with another device you know works or try another switch to rule out the Melody Bells as the source of the problem.

Care of Unit:

Melody Bells can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.