

---

---

## Mini Plasma Ball - #9230

---

---

## USER'S GUIDE

---

### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Create a dazzling interactive light show. Great for learning cause and effect and to increase visual attention. Choose two different modes: Continuous – creates non-stop random waves of bolts; or Touch activated – bolts follow the movement of your fingers. Works with or without a capability switch. Size: 3½"L x 3½"W x 5"H. Requires 4 AAA Batteries. Weight: 1¼ lbs.

*PLEASE NOTE: Color may vary.*

### **Operation:**

1. The Mini Plasma Ball requires 4 AAA batteries (not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn the Mini Plasma Ball over and slide the battery compartment cover off. Observing polarity, install four AAA size batteries (Not included) into the holder. Replace the battery compartment cover.
3. Plug any capability switch into the 1/8" jack located on the side of the Mini Plasma Ball, make sure the switch is plugged in all the way. There should be no gaps between the connections, if there is a gap the Mini Plasma Ball will stay ON and your switch will have no control over it.
4. There are two different modes: Continuous – creates non-stop random waves of bolts; or switch activated – For switch use set the ON/OFF switch to OFF. Works with or without a capability switch.

### **Troubleshooting:**

**Problem:** Mini Plasma Ball does not function correctly.

**Action #1:** Try re-installing the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that your switch is plugged in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

**Action #4:** Replace the batteries paying close attention to proper battery polarity.

### **Care of Unit:**

If you will not be using Mini Plasma Ball for an extended amount of time, we recommend removing the batteries.

The Mini Plasma Ball can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**