
Wheelie #9323

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Encourages singing and builds language skills.

Adorable animated plush toy bus sings, lights up and dances to "Wheels on the Bus" when you activate your switch. Great addition to any classroom or home. Encourages singing and builds language skills. Size: 10"L x 6"W x 6"H Weight: 1 lb. Battery: 3 AAA Requires: Works with or without a switch. Wheelie is surface washable only.

Operation:

1. Wheelie requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of the plush toy. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity. Replace battery cover and screw. Set the ON/OFF switch to ON.
3. Connect Wheelie to any external capability switch (not included) via the jack located at the end of his cord. Wheelie is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
4. Actuate your external capability switch or squeeze Wheelie's musical note symbol and he will sing, lights up and dance to "Wheels on the Bus". Great for teaching cause and effect and for developing visual attention.
5. Each switch activation or musical note squeeze will start or stop Wheelie. If you hit the switch or squeeze his musical note again during play, the song will start from the beginning.

Troubleshooting:

Problem: Wheelie does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Wheelie for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Wheelie is surface washable only.