
Lonestar the Longhorn #9328

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Wearing a blue bandana, Lonestar sings and strums his guitar to the popular country music song "On the Road Again". Teach cause and effect and music appreciation. Works with and without a switch. Size: 7"L x 8"W x 11½"H Weight: 1¼ lbs. Battery: 3 AA

Operation:

1. Lonestar requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Lonestar. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Set the On/Off switch to On. Replace the battery compartment cover and secure it with the screw.
4. Connect Lonestar to any external capability switch (not included) via the jack located at the end of his cord. Lonestar is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze Lonestar's foot with the musical note symbol and he will sing and strum his guitar to the popular country music song "On the Road Again". Teaches cause and effect and music appreciation.

6. Each switch activation or foot squeeze will start or stop Lonestar. If you hit the switch or squeeze his arm again during play, the music will start from the beginning.

Troubleshooting:

Problem: Lonestar does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Lonestar for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Lonestar is surface washable only.