



---

**Textured Plate Switches #7225B (Blue),  
7225O (Orange), 7225R (Red), 7225Y  
(Yellow)  
(Set of 4) #7226**

---

**USER'S GUIDE**

**enabling**  
devices

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

**enabling**  
devices

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Light-touch tactile switches activate with the slightest movement. Four textures in four colors to choose from: blue with inverse bumps, orange with thin ridges, red with wide ridges, and yellow with bumps. Buy all four and save. Size: 4"L x 6"W x 1½"H. Weight: ½ lb.

### **Operation:**

1. The Textured Switch does **not** require any batteries to operate.
2. Plug the Textured Switch into the jack on your switch-adapted toy/device.
3. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
4. Make sure that the connection between the Textured Switch and your toy/device is plugged in all the way. There should be no gaps.
5. Simply press anywhere on the Textured Switch's textured colored top to activate your toy/device.
6. The toy/device will only remain activated while the Textured Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

### **Troubleshooting:**

**Problem:** The Textured Switch does not activate your toy/device.

**Action #1:** Make sure that the connection between the Textured Switch and your toy/device is plugged in all the way. There should be **no** gaps. This is a common error and an easy fix.

**Action #2:** Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

**Action #3:** Try a different adapter (if applicable) to rule this out as the source of the problem.

### **Care of Unit:**

The Textured Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a nontoxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.