

---

## Giggle & Bubble Elmo #2257

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

Blow tons of bubbles while Elmo sings, talks, counts and giggles. Just press his nose or activate your adaptive switch and hear 15 different phrases while bubbles continuously blow out of his mouth. Great for teaching cause and effect and tracking. Size: 7"L x 7"W x 10"H Weight: 1½ lbs. Battery: 3 AA Works with or without a capability switch (Not Included).

### **Operation:**

1. Giggle & Bubble Elmo requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the back of Giggle & Bubble Elmo. Carefully turn the Elmo over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screws and install 3 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screws. Connect to any external capability switch (not included) via the jack located on the side of Elmo. Giggle & Bubble Elmo is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. The Bubble solution container screws into the bottom of Elmo. Follow the original manufactures instructions for installing. Do not discard the original bubble container as you will refill it with bubble solution when it runs out and re-use it.
4. Giggle & Bubble Elmo can be used with or without an external switch. The ON/OFF switch is Elmo's nose. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.

5. When finished playing with Giggle & Bubble Elmo turn him OFF to prevent battery drain.

### **Troubleshooting:**

**Problem:** Giggle & Bubble Elmo does not function correctly.

**Action #1:** Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

**Action #2:** Replace the batteries paying close attention to proper (+) and (-) battery polarity.

**Action #3:** Make sure you have enough Bubble solution in the bubble solution bottle.

**Action #4:** Make sure that your switch is plugged into the jack all the way. There should be NO gaps.

**Action #5:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

### **Care of Unit:**

If you will not be using Giggle & Bubble Elmo for an extended amount of time, we recommend removing the batteries.

Giggle & Bubble Elmo can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.