

---

---

## Bump & Go 747 Airplane #5055

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

## Bump n Go Plane

Our luxury 747 airplane has bump and go action, changing direction with every obstacle, when you activate your switch. See the lights flash and hear the roar of the jet engine. Great for sensory development and for teaching cause and effect. Some assembly required. Assembled size: 14"L x 14"W x 3"H. Requires 3 AA Batteries. Weight: 1 lb.

### Operation:

1. Bump & Go Plane requires 3 AA Batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn Bump & Go Plane over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the cord jack located at the back of Bump & Go Plane. Bump & Go Plane is equipped with a 1/8" female mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you have your switch plugged in all the way. There should be no gaps. When using an external switch leave the ON/OFF switch set to OFF.
4. Actuate your capability switch and Bump and Go Airplane will spin about when it hits an object and go in another direction. Lights will flash and the engine spins. Bump and Go Airplane can also be used without the use of an external switch, by turning the built in ON/OFF switch to ON.
5. Bump & Go Plane also come with a removable cap that covers the front wheels to use if you want to use the plane in a stationary position and just activate the lights and sound.

### Troubleshooting:

**Problem:** Bump & Go Plane does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is plugged in all the way. There should be NO gaps.

**Action # 3:** Make sure you have removed the cap that covers the front wheels for use when you want to use the plane in a stationary position.

**Action #3:** Try your switch/with another switch operated toy/device in an effort to rule out your switch as the source of the problem.

### Care of Unit:

If you will not be using Bump & Go Plane for an extended amount of time, we recommend removing the batteries.

The Bump & Go Plane can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**