

---

---

## Holiday Music Box #702X

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

Perfect for the holidays, this cheery Music Box plays “Jingle Bells” and lights twinkle when you activate your switch. If you prefer, you can also record over that song with your own 20-second holiday tune by simply pressing the record button and your switch and placing the mic near your speaker. Size: 5"L x 5"W x 5"H. Requires 4 AA Batteries. Weight: ½ lb.

#### **Operation:**

1. The Holiday Music Box requires 4 AA batteries (Not included Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under the unit. Carefully turn the unit over. Remove the battery covers screw by turning it counterclockwise with a Phillips head screwdriver. Install batteries, being careful to observe proper battery polarity.
3. Replace the battery case cover and secure with the screw. Do not over-tighten.
4. Turn the unit on by turning the ON/OFF/VOLUME knob located on the back of the unit. You will hear an audible click when the unit turns on. Playback volume can be adjusted using this knob.
5. Plug in any capability switch into the 1/8" jack to hear this cheery Music Box play “Jingle Bells” while lights twinkle when you activate your switch. If you prefer, you can also record over that song with your own 20-second holiday tune.
6. Make sure that you have your switch plugged in all the way. There should be no gaps.
7. To record, simply press and hold the “RECORD” button on the back panel of the unit first, then press down your own switch. While continuing to hold the record button and your switch, speak your message. Your mouth should be about 6 inches from the microphone when recording. Release both the record button and your switch when you finish recording.
8. To play back your message, simply activate your switch. It is not necessary to continue holding your switch when listening to the message. The unit will continue to playback the entire message, even if pressure on your switch is released.

9. The unit will retain recorded information indefinitely, even if the batteries are disconnected. Previously stored information will be erased only when a new recording is performed.

#### **Important Note:**

The memory of this unit is capable of holding up to a total of 20 seconds of speech information.

#### **Troubleshooting:**

**Problem:** The unit fails to operate, or operates incorrectly.

**Action #1:** Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

**Action #2:** Make sure that you have the unit turned on and the volume turned up to an audible volume.

**Action #3:** Make sure that you are holding both the record button and your switch SIMULTANEOUSLY while you are recording.

**Action#4:** Try the Holiday Music Box with another external capability switch to rule it out as the source of the problem.

**Action #4:** Make sure that there is nothing covering the Mic

**Problem:** The unit is playing old messages fine, but will not record new messages.

**Action #1:** Check your batteries – There is a 99% chance that either one is installed incorrectly and/or one is weak/dead.

#### **Care of Unit:**

The Holiday Music Box can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as this could damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.