

---

---

## Rockin' Robbie #9335

---

---

## USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

This adorable tree sings and sways while lights flash to "Rockin' Around the Christmas Tree" when you activate your switch. Size: 6"L x 6"W x 12"H. Requires 3 AA Batteries. Weight: 1½lbs.

### Operation:

1. Rockin' Robbie requires 3 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Rockin' Robbie over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Rockin' Robbie will work through the use of an external switch or the built in musical note button on his side.
4. Connect Rockin' Robbie to any external capability switch via the cord input jack. Make sure your switch is plugged in all the way, there should be no gaps. Press and release your capability switch and this adorable tree sings and sways while lights flash to "Rockin' Around the Christmas Tree". Great for teaching cause and effect and for developing tracking. If you press your switch while he is playing Rockin' Robbie will stop. Pressing and releasing your switch again will start the song from the beginning.
5. Turn OFF Rockin' Robbie when finished using to prevent false activation and battery drain.

### Troubleshooting:

**Problem:** Rockin' Robbie does not work.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action #3:** Make sure that you have plugged your switch in all the way. There should be no gaps.

**Action #4:** Try your external capability switches with another device to rule out the switches as the source of the problem.

### Care of the Unit:

If you will not be using Rockin' Robbie for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Rockin' Robbie is surface washable only.