

(Continued)

Action: Avoid these if possible, or choose another place to operate RC Stunt Car.

Problem: Loss of control.

Cause: Another radio control vehicle using the same frequency is operated near your vehicle. **Please Note: do not use two RC Stunt Car's near each other.** Out of sight or the control range of distance. (1 to 25 feet.)

Action: Move to another place where radio frequency interference from another device or vehicle is not present.

Care of Unit:

RC Stunt Car can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

RC Stunt Car #3092

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Enjoy hours of fast paced action. Just activate our adapted easy-to-use remote control and this acrobatic car will perform stunts, its 360-degree front axle will spin and perform wheelies. Bright multicolor flashing lights and on/off music add to the excitement. Remote also works with your adaptive switch to activate the stunt demo mode. Car size: 5½"L x 5"W x 5"H; Remote size: 7"L x 6"W x 10½"H. Car requires 3.6 Volt Rechargeable Battery pack (included); Remote requires 2 AA Batteries. Weight: 3 lbs.

Operation:

1. The RC Stunt Car requires 3.6 Volt Rechargeable Battery pack (included). Use the included USB charging cable with the car and any smartphone or tablet (USB AC wall charger, not included). Set the car's ON/OFF switch to OFF during charging. The USB plug will light up red during charging. When the car's battery pack is full charged the red light will go out. Charging time will vary depending on the type of charger you use.
2. To install the battery pack in the car, first turn the car over. Next remove the screw holding the battery compartment door and lift the cover off. Plug the battery pack into the power cable. Replace cover and screw. Turn the car's ON/OFF switch located on the bottom of the car to ON.
3. To install the batteries for the joystick remote control, turn the remote over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 2 AA batteries paying close attention to proper battery polarity. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together. Replace the battery compartment cover and secure with the screw.
4. The joystick controller allows the user to move RC Stunt Car forward, reverse, left or right. (Please Note: The front wheels spin left or right like a propeller, they do not turn like a normal car.

5. Slight pressure on the control button in any of the four directions will drive RC Stunt Car in that direction. Once you release pressure on the button RC Stunt Car will stop.
6. The joystick remote also works with any standard adaptive switch to activate the stunt demo mode. The car will move forward, reverse and left and right. Plug your switch into the 1/8 inch input jack on the side of the joystick remote. Make sure your switch is plugged in all the way. There should be no gaps in the connection.
7. When you are finished using RC Stunt Car turn the On/Off switch on the car and controller to Off, this will help conserve battery power. If RC Stunt Car is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from the car and controller during storage to prevent battery drain or leakage, which can cause damage to RC Stunt Car and big button controller.

Troubleshooting:

Problem: RC Stunt Car is not running.

Action: Make sure battery pack in the car is charged and the controller has good fresh batteries and installed following proper (+) & (-) battery placement.

Problem: RC Stunt Car is running intermittently.

Action: Replace batteries in the joystick remote control and charge the car's battery pack. Weak batteries will severely limit the normal transmitting range of your remote control.

Problem: RC Stunt Car does not react, or reacts poorly to operation by controller.

Cause: High-frequency interference occurred near to high-voltage lines, transformers and some types of building.

(Continued on back page)