
Crawl About Dog #4401

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Press the body of this Crawl About Dog or activate your capability switch and this cute critter will scoot across the floor and play twelve different melodies. Great for teaching cause and effect and for developing tactile skills. *Size: 8½"L x 6"W x 3"H. Requires 2 AA Batteries. Weight: ½ lb.*

Operation:

1. Crawl About Dog requires 2 AA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Locate the Velcro closure site on the bottom of Crawl About Dog. Open this up to reveal the battery compartment. Using a Phillips head screwdriver open the compartment and install 2 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Close up the Velcro attachment site. Please note: place the battery compartment with the speaker facing out towards the bottom of Crawl About Dog.
4. Connect Crawl About Dog to any external capability switch (not included) via the jack located at the end of Crawl About Dog's cord. Crawl About Dog are equipped with a 1/8" mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch and Crawl About Dog will play one of 12 melodies.

6. Once you release the external capability switch, Crawl About Dog will finish playing the song (approximately 10 seconds), and turn off.

Troubleshooting:

Problem: Crawl About Dog does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is plugged in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Crawl About Dog for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Crawl About Dog is surface washable only.