
Elliot Elephant #9337

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Sing along!

Activate your capability switch and Elliot will sing and sway along to the song "Do Your Ears Hang Low" while his ears flap up and down. Everyone will want to join in singing the song with Elliot. Also works without a switch. Size: 7"W x 10"H. Requires 3 AA Batteries. Weight: 2 lbs.

Operation:

1. Elliot Elephant requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Elliot Elephant. Using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw.
4. Connect Elliot Elephant to any external capability switch (not included) via the jack located at the end of his cord. Elliot Elephant is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.

5. Actuate your external capability switch or squeeze Elliot Elephant's Foot and he will sway his head back and forth and sing "Do Your Ears Hang Low" while his ears flap up and down.
6. Each switch activation or foot squeeze will start or stop Elliot Elephant. The song will always start from the beginning when stopped the next time you activate him.

Troubleshooting:

Problem: Elliot Elephant does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Elliot Elephant for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Elliot Elephant is surface washable only.