

---

---

**Feel Good Glenn #9338**

---

---

**USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Glenn the singing teddy bear makes everyone feel better by singing and dancing to the song "I Feel Good" when you activate your capability switch. He comes dressed in hospital scrubs with an embroidered stethoscope. Works with or without a switch. Size: 8"L x 9"W x 11"H. Requires 3 AAA Batteries. Weight: 1 lb.

### **Operation:**

1. Glenn requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Glenn. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Set the On/Off switch to On. Replace the battery compartment cover and secure it with the screw.
4. Connect Glenn to any external capability switch (not included) via the jack located at the end of his cord. Glenn is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze Glenn's arm with the musical note symbol and Glenn will start singing and dancing to the song "I Feel Good".
6. Each switch activation or arm squeeze will start or stop Glenn. If you hit the switch or squeeze her arm again during play, the rhymes and music will start from the beginning.

### **Troubleshooting:**

**Problem:** Glenn does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

### **Care of Unit:**

If you will not be using Glenn for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components Glenn is surface washable only.