

---

---

## Rocket Dream Ship #9339

---

---

### USER'S GUIDE



#### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Dream of the stars with this soft rocket ship that glows and plays 5 minutes of music and sounds when you activate your capability switch. The ship can also be used as a night light without music. Works with or without a switch. Size: 8"L x 8"W x 10"H. Requires 3 AAA Batteries. Weight: 1 lb.

## Operation:

1. Rocket Dream Ship requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Rocket Dream Ship. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Set the On/Off switch to On. Replace the battery compartment cover and secure it with the screw.
4. Connect Rocket Dream Ship to any external capability switch (not included) via the jack located at the end of his cord. Rocket Dream Ship is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
5. Actuate your external capability switch or squeeze Rocket Dream Ship's fin with the musical note symbol and Rocket Dream Ship will start playing music and sounds.

6. Each switch activation or arm squeeze will start or stop Rocket Dream Ship. If you hit the switch or squeeze is fin again during play, the music and sounds will start from the beginning.

## Troubleshooting:

**Problem:** Rocket Dream Ship does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

## Care of Unit:

If you will not be using Rocket Dream Ship for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Rocket Dream Ship is surface washable only.