
Twinkles Mint #9347

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

This cuddly owl plays two calming lullabies—"Twinkle, Twinkle, Little Star" and "Hush, Little Baby"--while rocking from side to side and gently flapping its wings. Its tummy lights up, for a soft, nightlight glow, while changing colors. Works with or without an adapted switch and has volume control on one foot. Great for bedtime routine or a sensory space. Requires 3 AAA batteries. Weight: ¾ lb.

Operation:

1. Twinkles Mint requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Twinkles Mint, under the Velcro flap. Using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw.
4. Connect Twinkles Mint to any external capability switch (not included) via the jack located at the end of his cord. Twinkles Mint is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.

5. Set the ON/OFF switch to OFF. Actuate your external capability switch or squeeze Twinkles Mint's Foot and he will play two calming lullabies—"Twinkle, Twinkle, Little Star" (approximately for 35 seconds) and "Hush, Little Baby"(approximately 30 seconds).--while rocking from side to side and gently flapping its wings. Its tummy lights and up for a soft, nightlight glow, while changing colors.
6. Each switch activation or foot squeeze will start or stop Twinkles Mint. The song will change and start from the beginning the next time you activate him.

Troubleshooting:

Problem: Twinkles Mint does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Twinkles Mint for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Twinkles Mint is surface washable only.