

---

---

**Fa La La Llama #9348**

---

---

**USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Jingle Bells, Jingle Bells, Jingle All The Way! This sweet little llama trots and sings Jingle Bells when activated with or without an adapted switch. It's sure to be your new favorite holiday toy! Fa-la-la-llama wears a shiny pink scarf and five gold bells that jingle when it moves. Requires 3 AA batteries. Weight: 2 lbs.

### Operation:

1. Fa La La Llama requires 3 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Fa La La Llama over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Fa La La Llama will work through the use of an external switch or the built in musical note button on his side.
4. Connect Fa La La Llama to any external capability switch via the cord input jack. Make sure your switch is plugged in all the way, there should be no gaps. Press and release your capability switch and Fa La La trots and sings Jingle Bells (approximately 45 seconds) when activated with or without an adapted switch. It's sure to be your new favorite holiday toy! Fa-la-la-llama wears a shiny pink scarf and five gold bells that jingle when it moves. Great for teaching cause and effect and for developing tracking. If you press your switch while she is playing, Fa La La Llama will stop. Pressing and releasing your switch again will start the song from the beginning.
5. Turn OFF Fa La La Llama when finished using to prevent false activation and battery drain.

### Troubleshooting:

**Problem:** Fa La La Llama does not work.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action #3:** Make sure that you have plugged your switch in all the way. There should be no gaps.

**Action #4:** Try your external capability switches with another device to rule out the switches as the source of the problem.

### Care of the Unit:

If you will not be using Fa La La Llama for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Fa La La Llama is surface washable only.