
Lovely Llamacorn #9349

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Who doesn't love a llama, especially when it's a unicorn, too! Lovely Llamacorn's horn glows and it plays a charming tune that evokes a fantasy world when activated. Works with or without an adapted switch. It's soft and cuddly, too, just like a Llamacorn should be. Requires 3 AAA batteries. Weight: 1 lb.

Operation:

1. Lovely Llamacorn requires 3 AAA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Lovely Llamacorn over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AAA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Lovely Llamacorn will work through the use of an external switch or the built in musical note button on his side.
4. Connect Lovely Llamacorn to any external capability switch via the cord input jack. Make sure your switch is plugged in all the way, there should be no gaps. Press and release your capability switch and Lovely Llamacorn's horn glows and it plays a magical sound effect (approximately 10 seconds). Press your switch again and she will play a charming tune that evokes a fantasy world when activated (approximately 30 seconds).. Works with or without an adapted switch. It's soft and cuddly, too, just like a Llamacorn should be. If you press your switch while she is playing, Lovely Llamacorn will stop. Pressing and releasing your switch again will start the magical sound effect or song from the beginning, depending on when you stopped her.

5. Turn OFF Lovely Llamacorn when finished using to prevent false activation and battery drain.

Troubleshooting:

Problem: Lovely Llamacorn does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action #3: Make sure that you have plugged your switch in all the way. There should be no gaps.

Action #4: Try your external capability switches with another device to rule out the switches as the source of the problem.

Care of the Unit:

If you will not be using Lovely Llamacorn for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Lovely Llamacorn is surface washable only.