
Spider-Man Bubble Blower #2333

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

It's your friendly neighborhood Spider-man and he's ready for bubble action! Activate him with a touch or with a capability switch (not included) and he shoots bubbles instead of a web from his hand! Spidey comes with 4 oz. of non-toxic, dye-free bubble juice for instant action. Size: 4"L x 6"W x 9"H. Requires 3 AAA batteries. Weight: ½ lb.

Operation:

1. Spider-Man Bubble Blower requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in the back of Spider-Man's head. Carefully turn Spider-Man over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screws and install 3 AAA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screws. Connect to any external capability switch (not included) via the jack located on the side of Spider-Man. Spider-Man Bubble Blower is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. The Bubble solution container is the bottom part of Spider-Man. Just unscrew the bottom of Spider-Man Bubble Blower and fill with bubble solution. Follow the original manufactures instructions for installing.
5. Spider-Man Bubble Blower can be used with or without an external switch. The ON/OFF switch is Spider-Man's spider symbol on his back. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.

5. When finished playing with Spider-Man Bubble Blower turn him OFF to prevent battery drain.

Troubleshooting:

Problem: Spider-Man Bubble Blower does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action #3: Make sure you have enough Bubble solution in the bubble solution tank.

Action #4: Make sure that your switch is plugged into the jack all the way. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Spider-Man Bubble Blower for an extended amount of time, we recommend removing the batteries.

Spider-Man Bubble Blower can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.