
Sky High Fubbles Bubble Blower #2334

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Get ready to dance and play under a cloud of bubbles!

The Sky High Bubble Machine uses seven bubble wands to create tons of bubbles that fly up in the air and gently float down. This bubble machine is fun for all ages. Just fill the reservoir on the top of the machine and push the button or your capability switch (not included) and watch the fun begin. Comes with 4 oz. of non-toxic, dye-free bubble juice. Size: 5"L x 6½"W x 6"H. Requires 4 AA batteries. Weight: 1 lb.

Operation:

1. Fubbles Fun requires 4 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the back of the bubble blower's base. Turn the bubble blower to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screws and install 4 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screws. Connect to any external capability switch (not included) via the jack located on the side of the bubble blower. Fubbles Fun is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure your switch is plugged in all the way. There should be no gaps.
4. Fubbles Fun can be used with or without an external switch. The ON/OFF switch is located next to the battery compartment. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.
5. When finished playing with Fubbles Fun turn the bubble blower OFF to prevent battery drain.

Troubleshooting:

Problem: Fubbles Fun does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action #3: Make sure you have enough Bubble solution in the dipping trough. The Bubble solution should cover the Bubble Dippers completely.

Action #4: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Fubbles Fun for an extended amount of time, we recommend removing the batteries.

Fubbles Fun can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.