
Mickey Bubble Blower #2332

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Mickey's playing his guitar—or is he? Activate him with a touch or with a capability switch (not included) and bubbles stream from his guitar! Mickey comes with 4 oz. of non-toxic, dye-free bubble juice to get his performance started. Size: 4"L x 5"W x 9"H. Requires 3 AAA batteries. Weight: ½ lb. Note: Does not play music.

Operation:

1. Mickey Bubble Blower requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in the back of Mickey's head. Carefully turn Mickey over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screws and install 3 AAA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screws. Connect to any external capability switch (not included) via the jack located on the side of Mickey. Mickey Bubble Blower is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. The Bubble solution container is the bottom part of Mickey. Just unscrew the bottom of Mickey and fill with bubble solution. Follow the original manufactures instructions for installing.
5. Mickey Bubble Blower can be used with or without an external switch. The ON/OFF switch is Mickey's mouse symbol on his back. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.

5. When finished playing with Mickey Bubble Blower turn him OFF to prevent battery drain.

Troubleshooting:

Problem: Mickey Bubble Blower does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action #3: Make sure you have enough Bubble solution in the bubble solution tank.

Action #4: Make sure that your switch is plugged into the jack all the way. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Mickey Bubble Blower for an extended amount of time, we recommend removing the batteries.

Mickey Bubble Blower can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.