
Bubbles The Dolphin #2339

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697

www.enablingdevices.com

Bubbles the Dolphin is a great companion for pool, beach, picnic or party! Eight rotating bubble wands mean more bubble fun. Just fill Bubbles' mouth with solution, and push the on/off button or your capability switch (not included) and out fly hundreds of bubbles! Capability switch must be sustained to activate bubbles. Comes with two 15ml packages of non-toxic bubble juice concentrate, a 4 oz. empty bubble juice bottle for mixing, and a mini screwdriver for battery installation. Size: 8"L x 6³/₄"W x 5³/₄"H. Requires 4 AA batteries. Weight: ³/₄ lb.

Operation:

1. Bubbles the Dolphin requires 4 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Bubbles the Dolphin. Carefully turn him over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screw and install 4 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the jack located on the side of the bubble blower. Bubbles the Dolphin is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. Bubbles the Dolphin can be used with or without an external switch. The ON/OFF switch is located on the back of his tail. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.
5. When finished playing with Bubbles the Dolphin turn the bubble blower OFF to prevent battery drain.

Troubleshooting:

Problem: Bubbles the Dolphin does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action #3: Make sure you have enough Bubble solution in the dipping troth. The Bubble solution should cover the Bubble Dippers completely.

Action #4: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Bubbles the Dolphin for an extended amount of time, we recommend removing the batteries.

Bubbles the Dolphin can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.