

---

---

## Head-To-Toe-Wilbur #9341

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Adorable switch-adapted Wilbur sings “Head, Shoulders, Knees and Toes” while touching his toes! Head-To-Toe Wilbur promotes exercise and interaction while teaching parts of the body. His soft plush covering and bright pink color make him an inviting workout buddy. Works with or without a capability switch (not included). Size: 6"L x 10"W x 11"H. Requires 3 AAA batteries. Weight: 1 lb.

### **Operation:**

1. Wilbur requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of each foot. Turn Wilbur over to reveal the battery compartments. Next using a Phillips head screwdriver open and remove the batter covers. Install 3 AAA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment covers and secure them with the screws. Set the ON/OFF switch to ON.
4. Connect Wilbur to any external capability switch (not included) via the jack located at the end of his cord. Wilbur is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch or press the musical note, located on the top of Wilbur’s left foot, sings “Head, Shoulders, Knees and Toes” while touching his toes! Head-To-Toe Wilbur promotes exercise and interaction while teaching parts of the body. Pressing your switch or the musical note while he is singing will stop him. Pressing your

switch or the musical note again will start him from the beginning of the song.

6. When finished using Wilbur turn his ON/OFF switch to off to prevent false activations and to prevent battery drain.

### **Troubleshooting:**

**Problem:** Wilbur does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

### **Care of Unit:**

If you will not be using Wilbur for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Wilbur is surface washable only.