
Tangled Tabby #9342

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

How did this cute little kitty get so tangled in holiday lights? From “Rockin’ Around the Christmas Tree,” of course! Press your capability switch or her paw and Tabby spins around to the popular holiday tune. This adorable cat is dressed in a Santa hat and has embroidered Christmas lights around her body. Size: 7½"L x 7"W x 10"H. Requires 3 AAA Batteries. Weight: 1½ lbs.

Operation:

1. Tangled Tabby requires 3 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Tangled Tabby over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Tangled Tabby will work through the use of an external switch or the built in musical note button on his side.
4. Connect Tangled Tabby to any external capability switch via the cord input jack. Make sure your switch is plugged in all the way, there should be no gaps. Press and release your capability switch and Tabby spins around to the popular holiday tune. “Rockin’ Around the Christmas Tree”. Great for teaching cause and effect and for developing tracking. If you press your switch while Tangled Tabby is playing Tangled Tabby will stop. Pressing and releasing your switch again will start the song from the beginning.
5. Turn OFF Tangled Tabby when finished using to prevent false activation and battery drain.

Troubleshooting:

Problem: Tangled Tabby does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action #3: Make sure that you have plugged your switch in all the way. There should be no gaps.

Action #4: Try your external capability switches with another device to rule out the switches as the source of the problem.

Care of the Unit:

If you will not be using Tangled Tabby for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Tangled Tabby is surface washable only.