
Jellyfish Soother #4122

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

What could be more calming than a glowing jellyfish playing soothing ocean sounds and gentle music? Turn it on by pressing on the edge of the jellyfish body or by using an external capability switch (not included) and she cycles through the colors of the rainbow while playing a 4-minute peaceful melody. Pressing again stops the action; there is also an on/off switch on the battery case. Beautiful ocean blue tentacles dangle from the plush body, which has a loop for hanging anywhere. Size: 7"L x 7"W x 8"H. Requires 3 AAA Batteries. Weight: 1 lb.

Operation:

1. Jellyfish Soother requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of Jellyfish Soother, under the Velcro flap. Using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to ON.
4. Connect Jellyfish Soother to any external capability switch (not included) via the jack located at the end of her cord. Jellyfish Soother is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.

5. Actuate your external capability switch or squeeze Jellyfish Soother's Musical Note and she cycles through the colors of the rainbow while playing a 4-minute peaceful melody. Each switch activation or musical Note squeeze will start or stop Jellyfish Soother. The song will change and start from the beginning the next time you activate her.

Troubleshooting:

Problem: Jellyfish Soother does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Jellyfish Soother for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Jellyfish Soother is surface washable only.