

---

---

## Fubbles Fun FiNiTi Bubble Blower #2337

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### **No spill!**

Activate your capability switch and this colorful blower will create hundreds of bubbles. No spill design and handy carry handle. Includes 2 oz. of bubble solution. Size: 5½"W x 7 ¾" H x 5½"D. Requires 4 AA Batteries. Weight: 1½ lbs.

#### **Operation:**

1. Fubbles requires 4 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the side of the bubble blower. Turn the bubble blower to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover and install 4 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and screw. For external switch use, the push button ON/OFF switch needs to be in the OFF position. Connect to any external capability switch (not included) via the jack located at the back of the Bubble Blower's base. Fubbles Bubble Blower is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. To fill the Bubble Blower, unscrew the base of the bubble blower. Pour the contents of the included 2 oz. bubble solution. Next, fill the remainder of the base with tap water. Screw that base back on.
5. The Bubble Blower can also be used with or without an external switch. The ON/OFF switch is located back side of the unit. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.
6. When finished playing with Bubble Blower turn OFF to prevent battery drain.

#### **Troubleshooting:**

**Problem:** The Bubble Blower does not function correctly.

**Action #1:** Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

**Action #2:** Replace the batteries paying close attention to proper (+) and (-) battery polarity.

**Action #3:** Make sure you have enough Bubble solution in the solution bottle. The Bubble solution should cover the tube enough to syphon the solution.

**Action #4:** Clean the tubes with warm water. Place the tubes in warm water and turn the bubble blower on. Let the bubble blower run for 2 or 3 minutes to allow the water to flush out the bubble solution.

**Action #5:** Make sure that the connection between the external capability switch is plugged in all the way. There should be NO gaps.

**Action #6:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using the Bubble Blower for an extended amount of time, we recommend removing the batteries.

The Bubble Blower can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.