
Holly Jolly Express #9346

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

All aboard the Holly Jolly Express! Santa's coming to town on this festive train that plays and bops to "Holly Jolly Christmas." Just press on the train's smokestack or your external capability switch and rock along with Santa. The Holly Jolly Express is made of soft and cuddly material. Size: 9"L x 5"W x 10"H. Requires 3 AAA Batteries. Weight: 1¼ lb.

Operation:

1. Holly Jolly Express requires 3 AAA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn Holly Jolly Express over and open up the Velcro enclosure, then using a Phillips head screwdriver remove the screw and lift the battery cover off. Observing proper (+) & (-) battery polarity, install 3 AAA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the ON/OFF switch to the ON position. **Please Note:** Holly Jolly Express will work through the use of an external switch or the built in musical note button on his Smokestack.
4. Connect Holly Jolly Express to any external capability switch via the cord input jack. Make sure your switch is plugged in all the way, there should be no gaps. Press and release your capability switch and this adorable train plays and bops to "Holly Jolly Christmas." Great for teaching cause and effect and for developing tracking. If you press your switch while he is playing Holly Jolly Express will stop. Pressing and releasing your switch again will start the song from the beginning.
5. Turn OFF Holly Jolly Express when finished using to prevent false activation and battery drain.

Troubleshooting:

Problem: Holly Jolly Express does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action #3: Make sure that you have plugged your switch in all the way. There should be no gaps.

Action #4: Try your external capability switches with another device to rule out the switches as the source of the problem.

Care of the Unit:

If you will not be using Holly Jolly Express for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Holly Jolly Express is surface washable only.