Lights and Sound Stacker

So much learning packed into one stacking toy—and in English and Spanish! Stack this toy's three colorful rings or press on the duck's head or one of three switches (not included) to make lights dance and music play! This cute little duck plays songs, animal sounds, and teaches ABCs and 123. Learning to distinguish between sizes and colors has never been this rewarding! Works with or without switches. Has on/off button and battery saving auto-off. Size: 5½"D x 8½"H. Requires 3 AA Batteries. Weight: 1 lb.

Helps with:

- Encouraging Reaching
- Developing Fine Motor Skills
- Increasing Visual Attention
- Teaching Cause & Effect

Operation:

1. The Lights and Sound Stacker requires 3AA batteries. The battery compartment is located under the base of the unit. To install batteries turn the stacker over. Next remove the small Phillips head screw and cover. Install batteries being careful to *observe proper (+) & (-) battery polarity*. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well. Set the ON/OFF switch to English or Spanish.

2. Stacking the rings in the correct order or using their switch, will reward the user by making lights dance and music play! This cute little Chick plays songs, tunes. Learning to distinguish between sizes and colors has never been this rewarding!

Operation with a switch:

- 3. Connect your switch via the 1/8-inch jack on the unit. **Please Note:** the first time you plug your switch into the Lights and Sound Stacker it will play a song, this is normal due to switch adaptation.
- 4. Make sure that you have your switch plugged in all the way. There should be no gaps.
- 5. Now, when you activate your switch a song will play in its entirety then stop. After the song finishes if you press your switch again it will play a new song. There are a total of five songs all together. Songs will play in a random order.

Troubleshooting:

Problem: The Lights and Sound Stacker will not operate.

Action #1: Check batteries for proper installation and freshness. Replace batteries if weak or dead.

Action #2: Make sure that all connections between cords, adapters, and devices are tight.

Care of Unit:

The Lights and Sounds Stacker can be wiped clean with any mild household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.



For Technical Support:

Call our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST) 1-800-832-8697

customer support@enablingdevices.com

Lights and Sound Stacker #8087

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com