

---

---

## Bop & Groove Tiger #1218

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Learn and play while rockin' and boppin' with this switch-adapted Tiger friend. Integrated capability switches and stabilizing base make this popular learning toy accessible to more kids than ever. Bop & Groove Tiger has more than 50 fun songs, sounds and phrases that introduce parts of the body, the alphabet and colors. Plus—you can record your own message and Tiger will play it back to the beat! Nine ways to activate—four integrated adaptive switches plus five built-in activation points. Press any one and Tiger lights up, moves and plays a message or sings a song. On/off switch saves battery power. Tiger is part of the Link Squad and will interact with any other Link Squad toys, including #1217 Crawl 'N Colors Chameleon. Size: 11"L x 9"W x 13"H. Requires 4 AA Batteries. Weight: 3 lbs.

#### **Operation:**

1. The Bop & Groove Tiger requires 4 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the Phillips Head screw from each cover, then lift the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Set the On/Off switch located on the bottom next to the right battery compartment to either Low or High volume setting.
3. The four large switches allow your child to easily activate the toy while also developing motor skills. A simple touch on any of the 4 colored switches will activate an engaging animal adventure! These special switches will replicate the Bop & Groove Tiger's built in buttons. (See the included original manufactures instructions for full details on features and function of this toy).

4. Bop & Groove Tiger has more than 50 fun songs, sounds and phrases that introduce parts of the body, the alphabet and colors. Plus—you can record your own message and Tiger will play it back to the beat! Nine ways to activate—four integrated adaptive switches plus five built-in activation points. Press any one and Tiger lights up, moves and plays a message or sings a song. On/Off switch saves battery power. Tiger is part of the Link Squad and will interact with any other Link Squad toys, including #1217 Crawl 'N Colors Chameleon.

#### **Troubleshooting:**

**Problem:** The Bop & Groove Tiger does not work.

**Action #1:** Check all batteries for proper (+) & (-) battery polarity.

**Action #2:** Replace the batteries with fresh new batteries. Never mix different brands or old and new batteries.

#### **Care of Unit:**

The Bop & Groove Tiger can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Bop & Groove Tiger turn the ON/OFF switch to OFF to help prevent battery drain. For prolonged storage we recommend removing the AA batteries.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.