





## ADAPTED ELECTRONICS COMPARISON CHART

ITEM #	ITEM NAME	Media Type Available on Device						Power Source			Power On/Off Mechanism		Device Functions and Types of Switches That Can Be Used				What Switches Control			
		AM/FM RADIO	TAPE	CD	MP3 AUX JACK	BLUETOOTH	HEADPHONE JACK	BATTERIES	AC	USB	BUTTON	SLIDE SWITCH	RADIO	TAPE	CD	MP3	PLAY	PAUSE	STOP	ADVANCE
4090	ADAPTED BLUETOOTH SPEAKER 	No	No	No	Yes	Yes	No	No	No	Yes	Yes	No	N/A	N/A	N/A	Integrated Switch	Yes	Yes	Yes	Yes
5943	CD BOOM BOX CONTROL CENTER 	Yes	Yes	Yes	Yes	No	Yes	Yes 6 C	No	No	No	Yes	N/A	N/A	N/A	N/A	Yes	Yes	Yes	Yes
3414	PORTABLE CD PLAYER W/RADIO 	Yes	No	Yes	Yes	No	No	Yes 6 C	No	No	Yes	No	ALL: Momentary, On/Off, Latch or Wireless	N/A	Momentary & Wireless Only	Not Switch Adapted	Yes	CD Only	Radio Only	No
4098	SWITCH-ADAPTED BLUETOOTH SPEAKER 	No	No	No	No	Yes	No	No	No	Yes	no	No	N/A	N/A	N/A	Yes	Yes	Yes	Yes	No

ITEM #	ITEM NAME	Media Type Available on Device						Power Source			Power On/Off Mechanism		Device Functions and Types of Switches That Can Be Used				What Switches Control			
		AM/FM RADIO	TAPE	CD	MP3 AUX JACK	BLUETOOTH	HEADPHONE JACK	BATTERIES	AC	USB	BUTTON	SLIDE SWITCH	RADIO	TAPE	CD	MP3	PLAY	PAUSE	STOP	ADVANCE

**GLOSSARY FOR CHART**

**Momentary Switch** - Press the switch and the device stays on as long as you maintain pressure on the switch. Once you release the switch, the device stops working.

**On/Off or Latch Switch** - Press the switch once and release, the device turns on. Press the switch a second time and release, the device turns off. Works just like a light switch. (See Item #7805 On/Off Jumbo Switch)

**Timer Switch** - You can preset an amount of time that a device will stay on once the switch is pressed. The time can be set for 0 to 120 seconds. Once the timer is set, press the switch once and release and the device will activate for the time recorded.

**Wireless Switch** - When the switch is pressed, it transmits a signal to the receiver (included), which activates a device up to 20 feet away. (See Item #786 Wireless Gumball Switch)