
Sensory Dome Switch #8870 & 8871(Set of 3)

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Heightens sensory awareness!

The Sensory Dome Switch provides a visual, tactile and somatosensory experience while activating a toy or device. A slight push on the dome produces gentle vibration and activates the connected device. The dome's small bumps provide a great tactile experience. The dome is also squishy for additional tactile input. Size: 6½"D x 4"H. Requires 2 AA Batteries. Weight: 1½ lbs.

Operation:

1. The Sensory Dome switch requires 2 AA batteries to operate (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to face the black battery compartment cover. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and lift the cover off, it may be necessary to use the end of the screwdriver to lift one edge of the cover. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw. Set the On/Off switch located on the side of the switch to On.
3. Plug the Sensory Dome switch into the jack on your switch-adapted toy/device.
4. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
5. Make sure that the connection between the Sensory Dome switch and your toy/device is tight. There should be no gaps.
6. Simply press anywhere on the Sensory Dome Switch's textured top to activate your toy/device.

7. The toy/device will only remain activated while the Sensory Dome switch continues to be actuated. Once you release the switch, the toy/device will turn off. The user will also feel a gentle vibration from the switch if the switch is activated.

Please Note: Switch must be turned OFF when not in use to prevent battery drain. Failure to do so will cause the batteries to drain.

Troubleshooting:

Problem: The Sensory Dome switch does not activate your toy/device.

Action #1: Make sure that the connection between the Sensory Dome switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Action #4: Make sure the batteries are fresh; this switch will not work without batteries.

Care of Unit:

The Sensory Dome switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.