

---

---

## Safari Beats #3301

---

---

## USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Move to the beat with this cute and portable drum toy, adapted for those who can't access the built-in buttons. Three jacks for external switches activate each of the 3 light-up drums. Two modes of play—drum sounds and melodies—keep the party going. Use with up to 3 external switches that meet the user's individual needs. Also works without a switch. Size: 6"L × 9"W × 4½"H. Requires 3 AAA Batteries. Weight: 1 lb.

### **Operation:**

1. The Safari Beat requires 3 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover back and then off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace cover and screw. Set the On/Off switch located on the side of the drum to one of the two modes Melody or animal sounds (See included OEM guide for details about each mode).
3. The three large buttons allow your child to easily activate the toy while also developing motor skills. We've also adapted Safari Beat so you add up to three of your own adaptive switches (not included), each switch will replicate the function of the corresponding-colored button.
4. In animal mode press the light-up buttons or your own switch to hear short melodies with animal sounds accompanied by the colored buttons lighting up to the beat. Press the light-up buttons or your own switches in the music mode to hear short tunes and melodies as the colored buttons light up.

### **Troubleshooting:**

**Problem:** The Safari Beat does not work.

**Action #1:** Check all batteries for proper (+) & (-) battery polarity.

**Action #2:** Replace the batteries with fresh new batteries. Never mix different brands or old and new batteries.

### **Care of Unit:**

The Safari Beat can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Safari Beat turn the ON/OFF switch to OFF to help prevent battery drain. For prolonged storage we recommend removing the AAA batteries.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.