
### Care of the Unit:

Hurricane Bubbles should be cleaned after each use following photo diagram below.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.



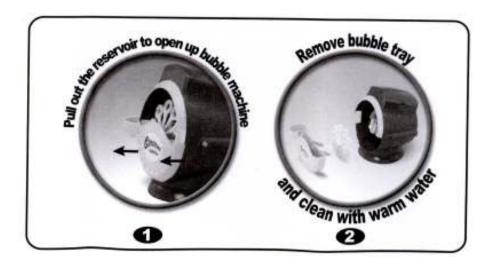

### For Technical Support:

Call our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST) 1-800-832-8697

customer support@enablingdevices.com

# **Bubble Hurricane #2239**

## **USER'S GUIDE**



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

#### A storm of bubbles!

Activate your capability switch to create thousands of fun bubbles. Great for developing tracking skills and for teaching cause and effect. Comes with an 8 oz. bottle of bubble solution. Size: 11"W x  $12\frac{1}{2}$ "H x  $5\frac{1}{2}$ "D. Requires 6 AA Batteries. Weight:  $1\frac{1}{2}$  lbs.

### Operating instructions:

- Hurricane Bubbles requires 6 AA batteries (Not included) to operate. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old, new or different types of batteries together. Replace the battery compartment covers and screws.
- 2. The battery compartment is located on the top of the unit. Lift up on the left or right side of the cover. The cover plate will lift off. Next using a Phillips head screw driver, remove the four small Phillips head screws. Lift cover off install 6 AA batteries paying close attention to proper (+) and (-) battery polarity.
- 3. Replace the battery compartment cover and screws. Connect Hurricane Bubbles to any external capability switch (not included) via the cord jack cord located at the back of the unit. Hurricane Bubbles is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you plug your switch all the way in. There should be no gaps.
- 4. You are now ready to fill your Hurricane Bubbles with bubble solution. As shown in photo.
- 5. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.



### **Troubleshooting:**

**Problem # 1:** Hurricane Bubbles does not turn on when switch is depressed.

**Action # 1:** Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

Action # 2: Make sure batteries are fresh and installed properly.

Action # 3: Try a different switch with your Hurricane Bubbles to rule

**Problem #2:** Hurricane Bubbles does not blow bubbles.

Action: Make sure you have bubble solution in the reservoir.